

F1T & F2ST

# Filter Installation guide

- 1** Connection should be made to mains cold water inlet

Mains cold inlet



- 2** Connect the 1/4" PF X 1/2" BSP connector to your mains cold inlet pipe using a suitable fitting (not provided)



## Contents



1/4" tubing



1/4" PF x 1/2" BSP Connector




Filter cartridge (inc. housing)




Filter housing fixings


- 3** Remove filter from housing and secure the bracket to the wall using the fixings supplied.

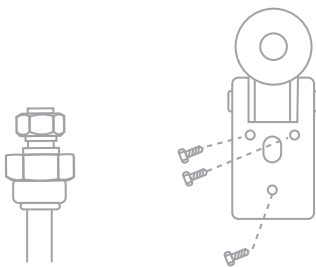

- 4** Push the filter cartridge up into the housing and turn towards the "close" position.

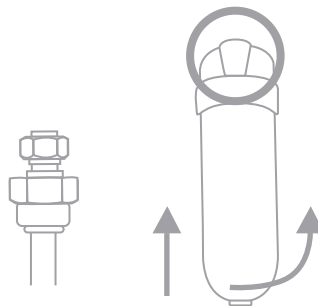

- 5** Cut the 1/4" tubing supplied to the required length and connect the valve to the filter and the filter to the unit or tap to be supplied.

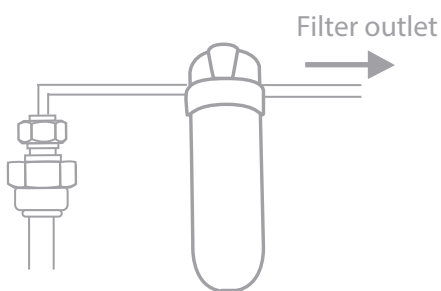

- 6** Turn on the water supply and check all connections for leaks.

NOTE: The filter has a service life of approx. 6 months after which the cartridge should be changed.

F1T & F2 ST

# Filter Installation overview

