




Product Instruction Manual

Opal

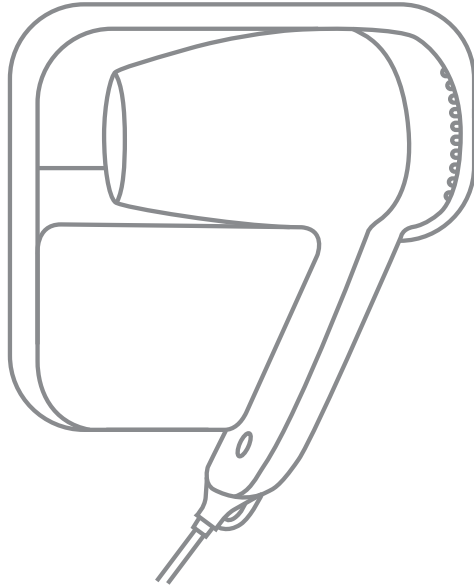

OP1200










Holster Style Hair Dryer

Overview

Thank you for purchasing an Opal Holster Style Hair Dryer. A compact solution for hotels and light commercial applications. Not suitable for heavy usage applications such as public swimming baths and sports facilities.

Please read and follow these instructions to ensure that installation and operation are as simple and safe as possible.

Important Safety Points

-  This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
-  Children shall not play with the appliance.
-  Cleaning and user maintenance shall not be made by children without supervision.
-  If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
-  This appliance should only be installed and maintained by a competent person in accordance with any local electrical regulations.
-  The appliance is only intended for fixed installations.
-  This appliance is not designed for outdoor use.
-  Only connect the appliance to an electrical supply that meets the specification detailed on the rating label.
-  The appliance must be permanently connected to the electrical supply through an appropriately rated isolating switch with a contact separation in all poles.

1. Wall Mounting



This appliance should only be installed and maintained by a competent person in accordance with any local electrical regulations.



The appliance is only intended for fixed installations.



This appliance is not designed for outdoor use.



When installed, the hand-held part of this appliance, when fully extended, must be out of reach of a person taking a bath or shower.

- If concealed cable entry is desired fully read instructions before commencing wall mounting.
- Select a suitable mounting location for the appliance considering the reach of the handheld section of the appliance.
- Secure the mounting bracket to the wall using one each of the supplied wall plug and screws.
- Align the corresponding hole at the rear of the appliance just above the bracket and slide it down to engage into the bracket.
- Locate the lower securing screw hole beneath the handheld section of the appliance and mark the position on the wall.
- Remove the appliance from the wall by sliding it up and clear of the bracket.
- Drill the marked hole and insert the final wall plug.
- Return the appliance to the bracket as per the previous instruction and secure the appliance to the wall using the remaining screw.
- Insert the large white cap to conceal the screw hole before replacing the handheld section to complete the mounting.

Concealed Cable Entry - If Desired

- Remove the hair dryer from the holster and locate 2 screws (see diagram 1).
- Remove both screws and pull the cover away.

- Remove the power cord from the wiring terminal (see diagram 2).
- Push to remove the circular plastic piece to create wire hole (see diagram 2) and place your prepared power cord through this hole.
- Make electrical connection to the wiring terminal as per the electrical section of these instructions.
- Refit the cover by reversing the above steps.
- Fit supplied small white cap into the original cable entry hole.

Diagram 1


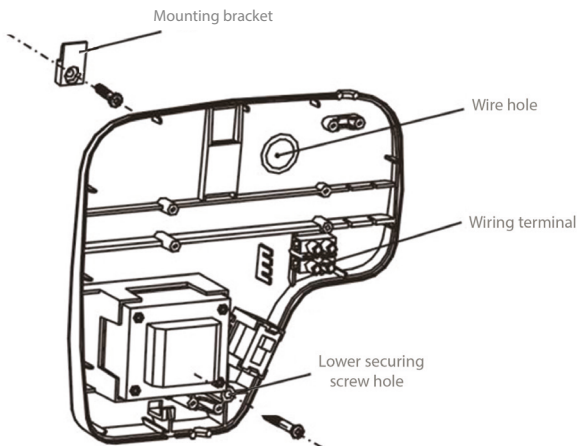


Diagram 2

2. Electrical Connection



Only connect the appliance to an electrical supply that meets the specification detailed on the rating label.

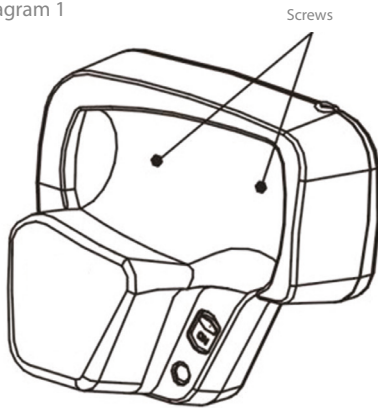

The appliance must be permanently connected to the electrical supply through an appropriately rated isolating switch with a contact separation in all poles.

- Electrical connection should be made via a 13A switched fuse spur.
- Make connections as below;
 - Brown live wire to the terminal marked 'L'
 - Blue neutral wire to the terminal marked 'N'

3. Operation

- Remove the hair dryer from holster.
- Ensure the on / off switch on the holster is in the on position.
- Use the sliding switch to select 'high' or 'low' temperature.
- Press and hold the power button to activate.
- Release power button to cease operation.
- Place appliance in holster when not in use.

4. Cleaning and Maintenance



Ensure the appliance has cooled down before performing any maintenance task.



Isolate the appliance from the electrical supply before performing any maintenance task.



Do not use abrasive chemicals to clean this appliance.



Use a soft damp cloth when cleaning, avoid excessive use of liquids.



Ensure any future maintenance or modifications to the appliance complies with the guidelines in these instructions.

- Use a soft brush or vacuum cleaner to gently remove any dust or debris that could adversely affect the airflow through and around the appliance.

5. Specification

Model	OP1200
Power	1.2 kW
Voltage	230 V
Dimensions (h x w x d)	240 x 165 x 100 mm
Weight	0.8 kg

6. Guarantee and Service Policy

This product is covered by a standard parts or replacement warranty for a period of 12 months from the date of purchase.

If there is a manufacturing defect within the warranty period we will send spare parts, repair and return the unit or, at our discretion, supply a replacement product. Incorrect installation and failure to follow correct operating instructions are excluded. Consequential costs such as labour charges or damage to surroundings are expressly excluded.

7. Contact Us

If you experience a problem with this product you should first contact our service department on 01924 225 200 before taking any further action. Experience has shown that issues can often be resolved without the need to return or uninstall the product.



INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE 2012/19/EU.

At the end of its working life this equipment must not be disposed of as household waste. It must be taken to a local authority waste collection centre or to a dealer providing this service. Disposing of electrical and electronic equipment separately enables its components to be recovered and recycled to obtain significant savings in energy and resources. In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed out dustbin.

Hyco Manufacturing Ltd
Normandy Court
Express Way
Castleford, WF10 5NR

hyco.co.uk

T 01924 225 200
E sales@hyco.co.uk